

Assembly of ALTAIR 3P / NEPTUNE 3P Handle on axle (Left Hand Side handle version)

Raise the Backrest



To put the backrest back in sleeping position :

- Pull up the bar
- Initiate The Rotation Forward
- release the bar

Remove the nuts and washers

Assembly of the seat cushion :

Remove the cover and the protection-cardboard around articulation.

Rotate the hinge plates of the seat


ATTENTION, NEVER FORCE THE MECHANISM!

1 – Press the release lever and hold it in position


2 – Rotate the triangular plate of the handle simultaneously with the opposite plate, up to position “B”.

THIS MAY BE EASIER WITH 2 PEOPLE IF NECESSARY

3 – Release the handle when the 2 triangular plates are well aligned in position “B”

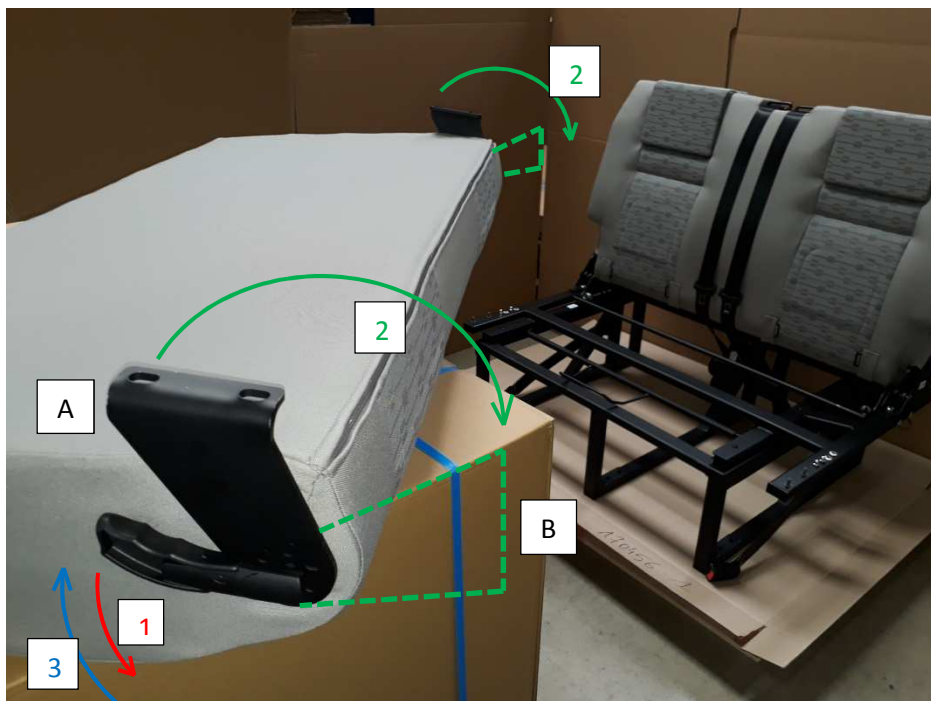

Approximate alignment of the triangular plates in position "B"

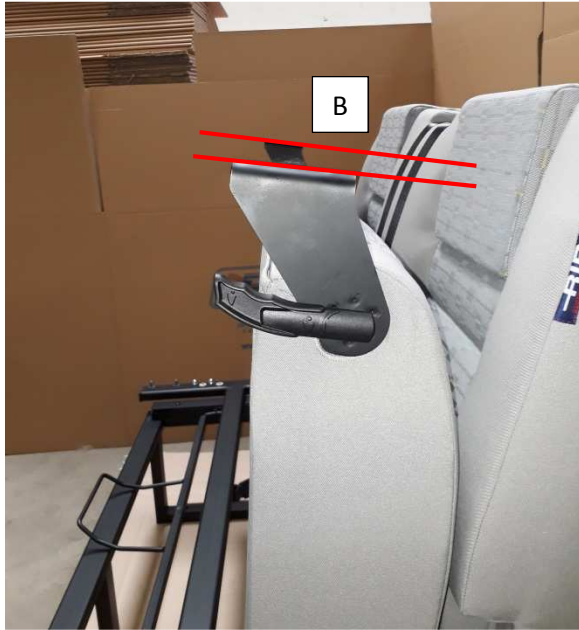

WHAT TO DO IN CASE OF BLOCKED PLATE :


1 – Press the release lever and hold it in position

2 – Bring back the hinge on handle side to the position "A"

3 – Rotate the triangular plate of the handle simultaneously with the opposite plate, up to position "B".


ASK A HELPER TO OPERATE USE 2 PEOPLE IF NECESSARY

4 – Release the handle when the 2 triangular plates are well aligned in position "B"

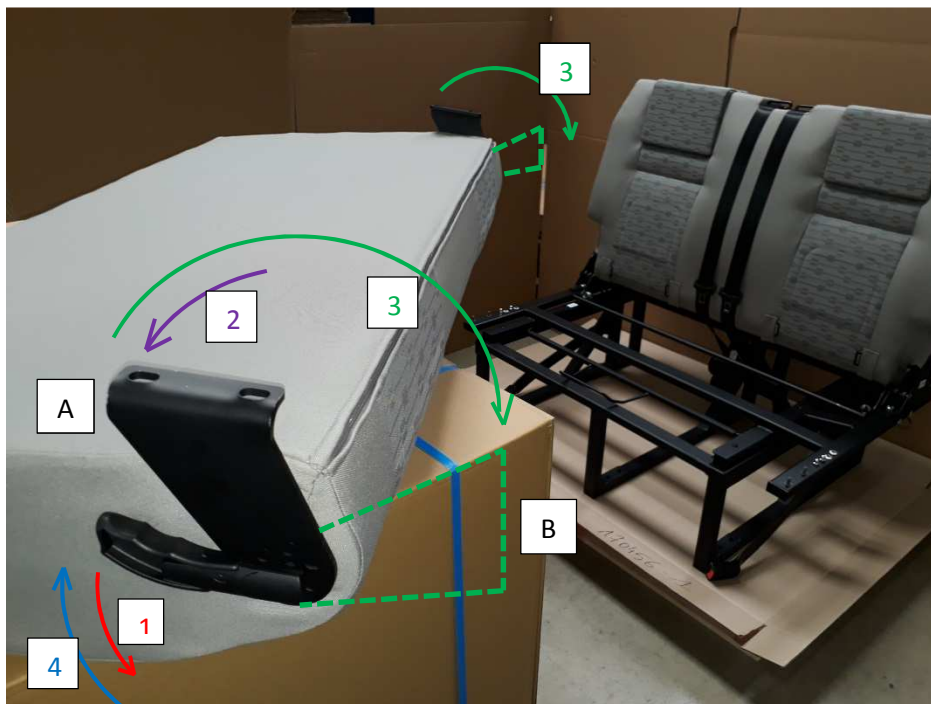


Screwing of the cushion :

- 1 – Screw the triangular plate on the opposite side of the handle (torque N.m 24 maximum)
- 2 – Press the release lever and hold it in position
- 3 – Lower the hinge onto the bolts of the frame
- 4 – Release the lever
- 5 – Screw the second hinge on handle side (24 N.m tightening torque maximum)

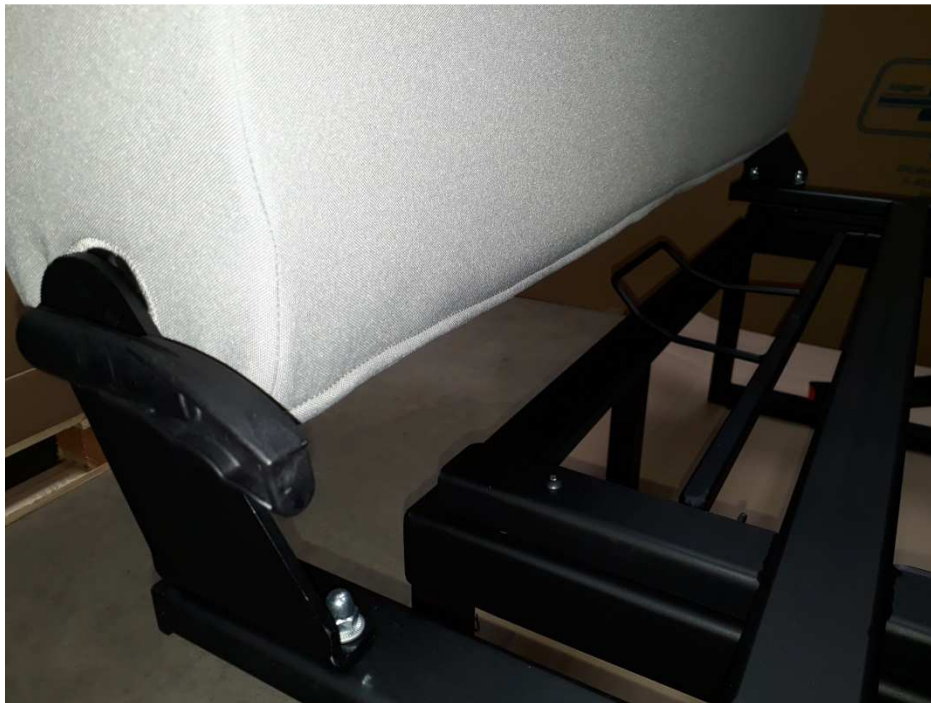

Rotation of the cushion:

- 1 – Press the release lever and hold it in position
- 2 – Rotate the seat cushion to the required position
- 3 – Release the lever

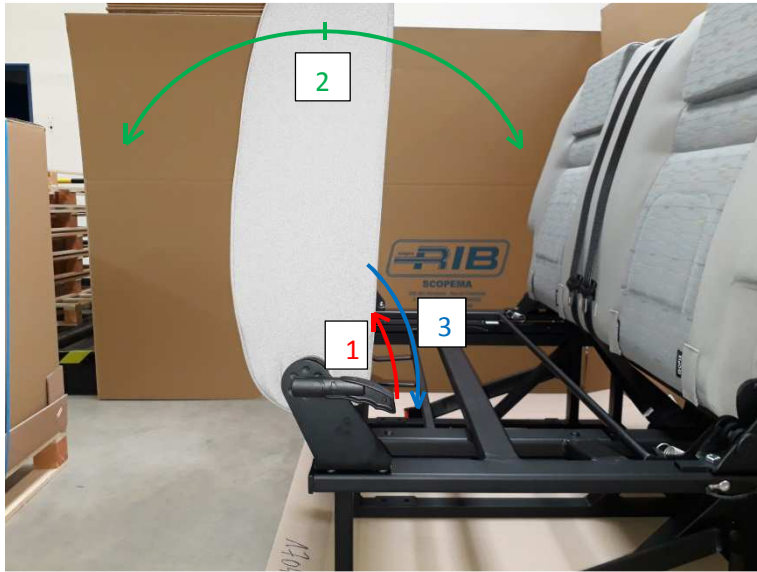

Assembly of the rear back (only for model ALTAIR 3 P):

Proceed in the same way for the Assembly of the rear backrest (rotation of the handle in the opposite direction of the seat cushion one)

Day / driving position :



Operating sleeping position :

